



C8s Manual

ThorFire C8s is a flashlight with 4 modes: Moonlight/Low/Mid/High, and hidden Strobe. The tail switch controls all the functions: fully click the switch to turn on/off, when the light is on, tab or half press the switch to change modes, double tab to activate strobe mode.



Technical Parameters

1. Uses Cree XM-L2 LED with a lifespan of 20 years.
2. Uses one 18650 3.7v battery (Not Included).
3. Size: approx 143mm (Length) * 25.4mm (Body Diameter) * 44.5mm (Head Diameter).
4. 145-gram weight (Excluding the battery).
5. Tail tap switch for on/off and output selection.
6. Made of Aircraft-grade Aluminum.
7. High-efficiency reflection lens.
8. Max 900 Lumens output.

Operation

ON/OFF

Press the tail switch to turn on the light. Another complete press on the switch turns it off.

Output Selection

Output Selection: When the light is on, tab or half press the switch to change modes in order of Moonlight/Low/Mid/High, double tab to activate Strobe mode.

Intelligent Memory Circuit

Keep the light off over 2 seconds and then turn on, the output mode will get back to the same mode.

Battery Usage

- 3.7V 18650 Battery is Usable.
- Two 3V CR123A Batteries are Usable.

Battery Replacement

Unscrew the light tail to insert the battery with anode(+) toward the light head, screw the tail cap to test.

Usage and Maintenance

- Please do not disassemble the sealed head, doing so can cause damage to the flashlight and will void the warranty.
- High-power light should use battery with high current discharge capability; we suggest using high quality battery to increase the runtime of this high-intensity light.
- Please take out the battery if the flashlight will not be used for a long time, or it may cause damage from electrolyte leakage or battery explosion.
- The O-ring may be worn out after using for a long time. If it happens, please replace the O-ring with a new one to keep the light properly sealed against water.
- Please clean the contacts of your light from time to time, especially if the light flickers or does not light up. There may be several reasons for a flickering or not working light:
Reason A: The battery needs replacing.
Solution: Replace the battery (Please confirm the correct installation of anode and cathode)
Reason B: The threads, PCB board contact or other contacts are dirty.
Solution: Clean the contact points with an alcohol soaked cotton swab.
If the above methods don't work, please contact the distributors and refer to the warranty policy.

Product Warranty

We will replace afflicted with manufacturing defects within 40 days of purchase and repair a light free of charge within 24 months of purchase if problems develop with normal use; if repair is required after 24 months from the date of purchase, we will charge for parts. The total repair fee is dictated by the cost of the replaced materials.

Warning

The led flashlight is a high-intensity lighting device capable of causing eye damage. Avoid shining the light directly into the eyes.

For more information, please go to:

www.thorfiredirect.com.

Any questions or problems, please contact:

service@thorfiredirect.com.

Facebook Page Name:

ThorFire Official